HOME DECORATORS collection®

ARTISAN MAGAZINE END TABLE

Assembly Instructions

HDC #:08080 MFG #:AT7107

Please read over the instructions; it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Parts Check List

Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

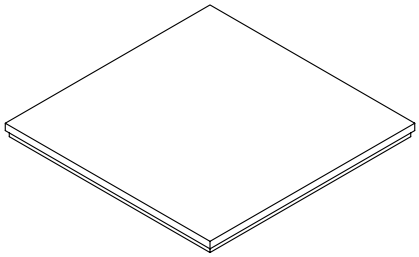

① Top Panel - 1

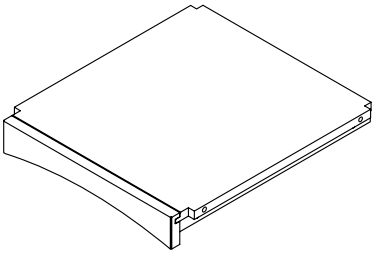

② Bottom Frame - 2

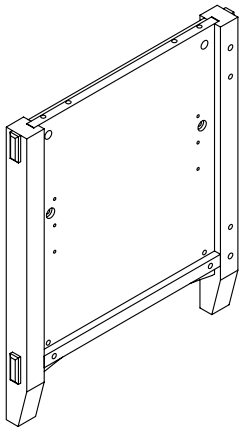

③ Left Side Panel - 1

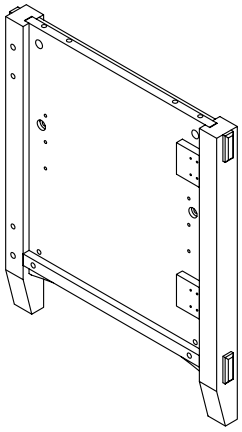

④ Right Side Panel - 1

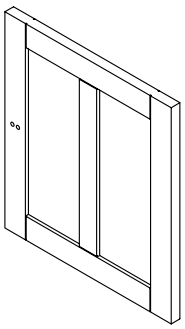

⑤ Door - 1

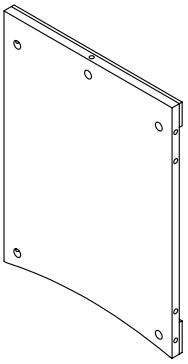

⑥ Back Panel - 1

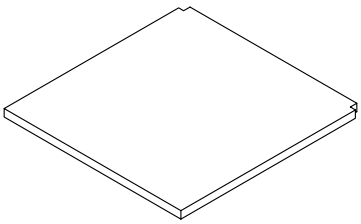

⑦ Adjustable Shelf - 1

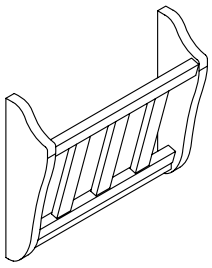

⑧ Magazine Rack - 2

Hardware Check List

Please take all the hardware listed below out of the hardware bag.

A

Cam-Bolt - 9

B

Cam-Lock - 9

C

Cover - 9

D

Glue - 1(25g)

E 

Allen Wrench - 1

F 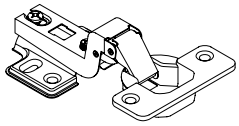

Hinge - 2

G

Flat Head Screw - 12
(Ø7×16mm)

H

Door Hand Pull - 1

I

Long Bolt - 2
(Ø5/32"×5/8")

J 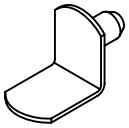

Shelf Support - 4

K

Plastic - 1

L

Wood Dowel - 16
(Ø8×30mm)

M 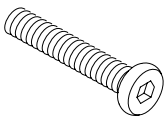

Allen Bolt - 8
(Ø1/4"×1-1/2")

N

Lock Washer - 8 (Ø1/4")

O

Flat Washer - 8
(Ø1/4"×16D)

When inserting cam-bolts, the shoulder should be flush with the surface. If using an electric screwdriver, be careful not to over tighten the Cam-bolt, this can cause damage .

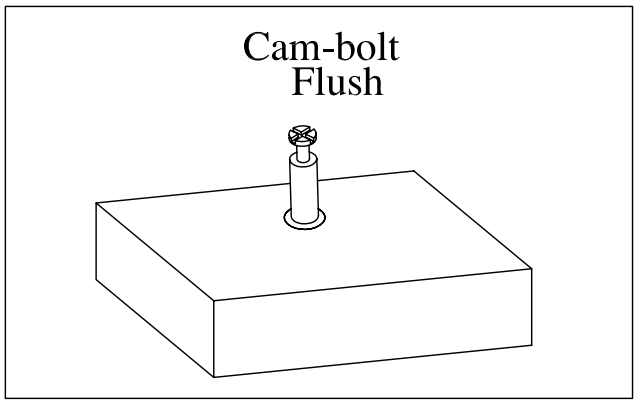

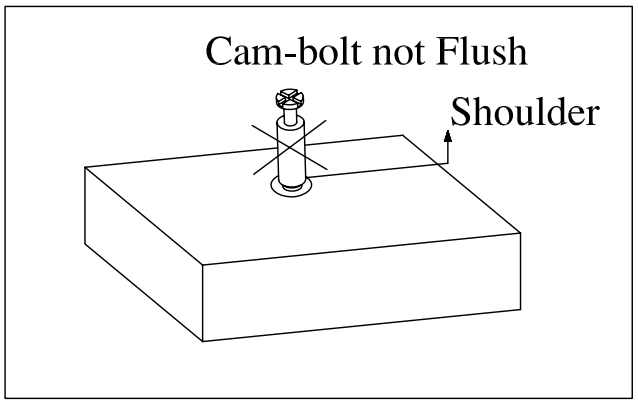

How to use Cam-Locks

Cam-locks should be inserted into their designated holes with the arrow pointing to the nearest edge. The coordinating Cam-bolt will be inserted into the Cam-lock. Using the allen wrench or a flat-head screwdriver, tighten the Cam-locks until you feel resistance. Over tightening the Cam-lock may break the cam-lock.

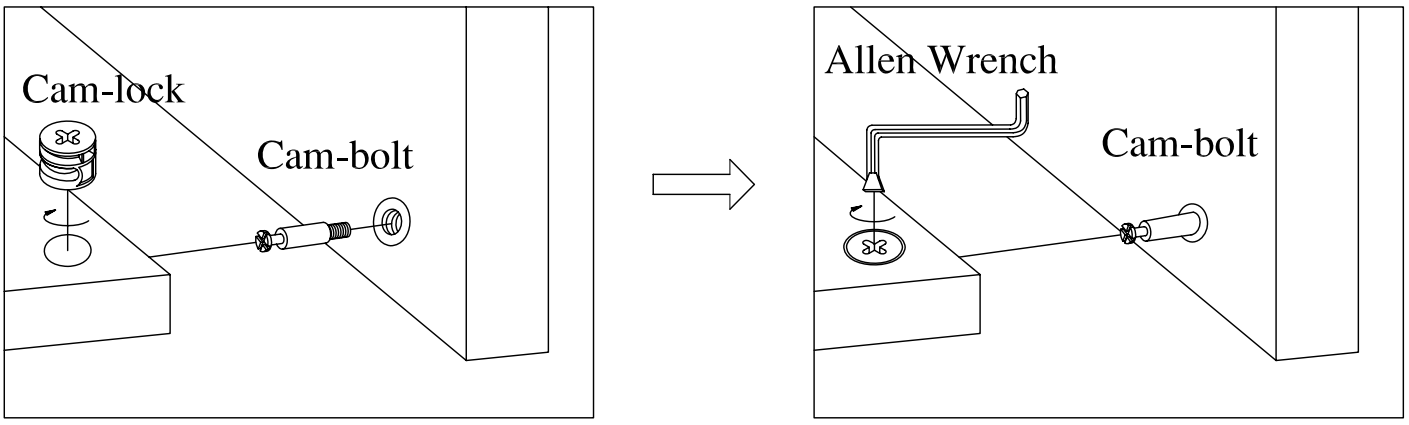

1. Fill the middle holes on Side Panels(3&4) , Bottom Panel(2), and Magazine Rack(8) with Glue(D) . Then insert Wood Dowels(L) . Screw Cam-bolts(A) into the threaded holes on Top Panel(1) and Side Panels(3&4).
   See figure below:

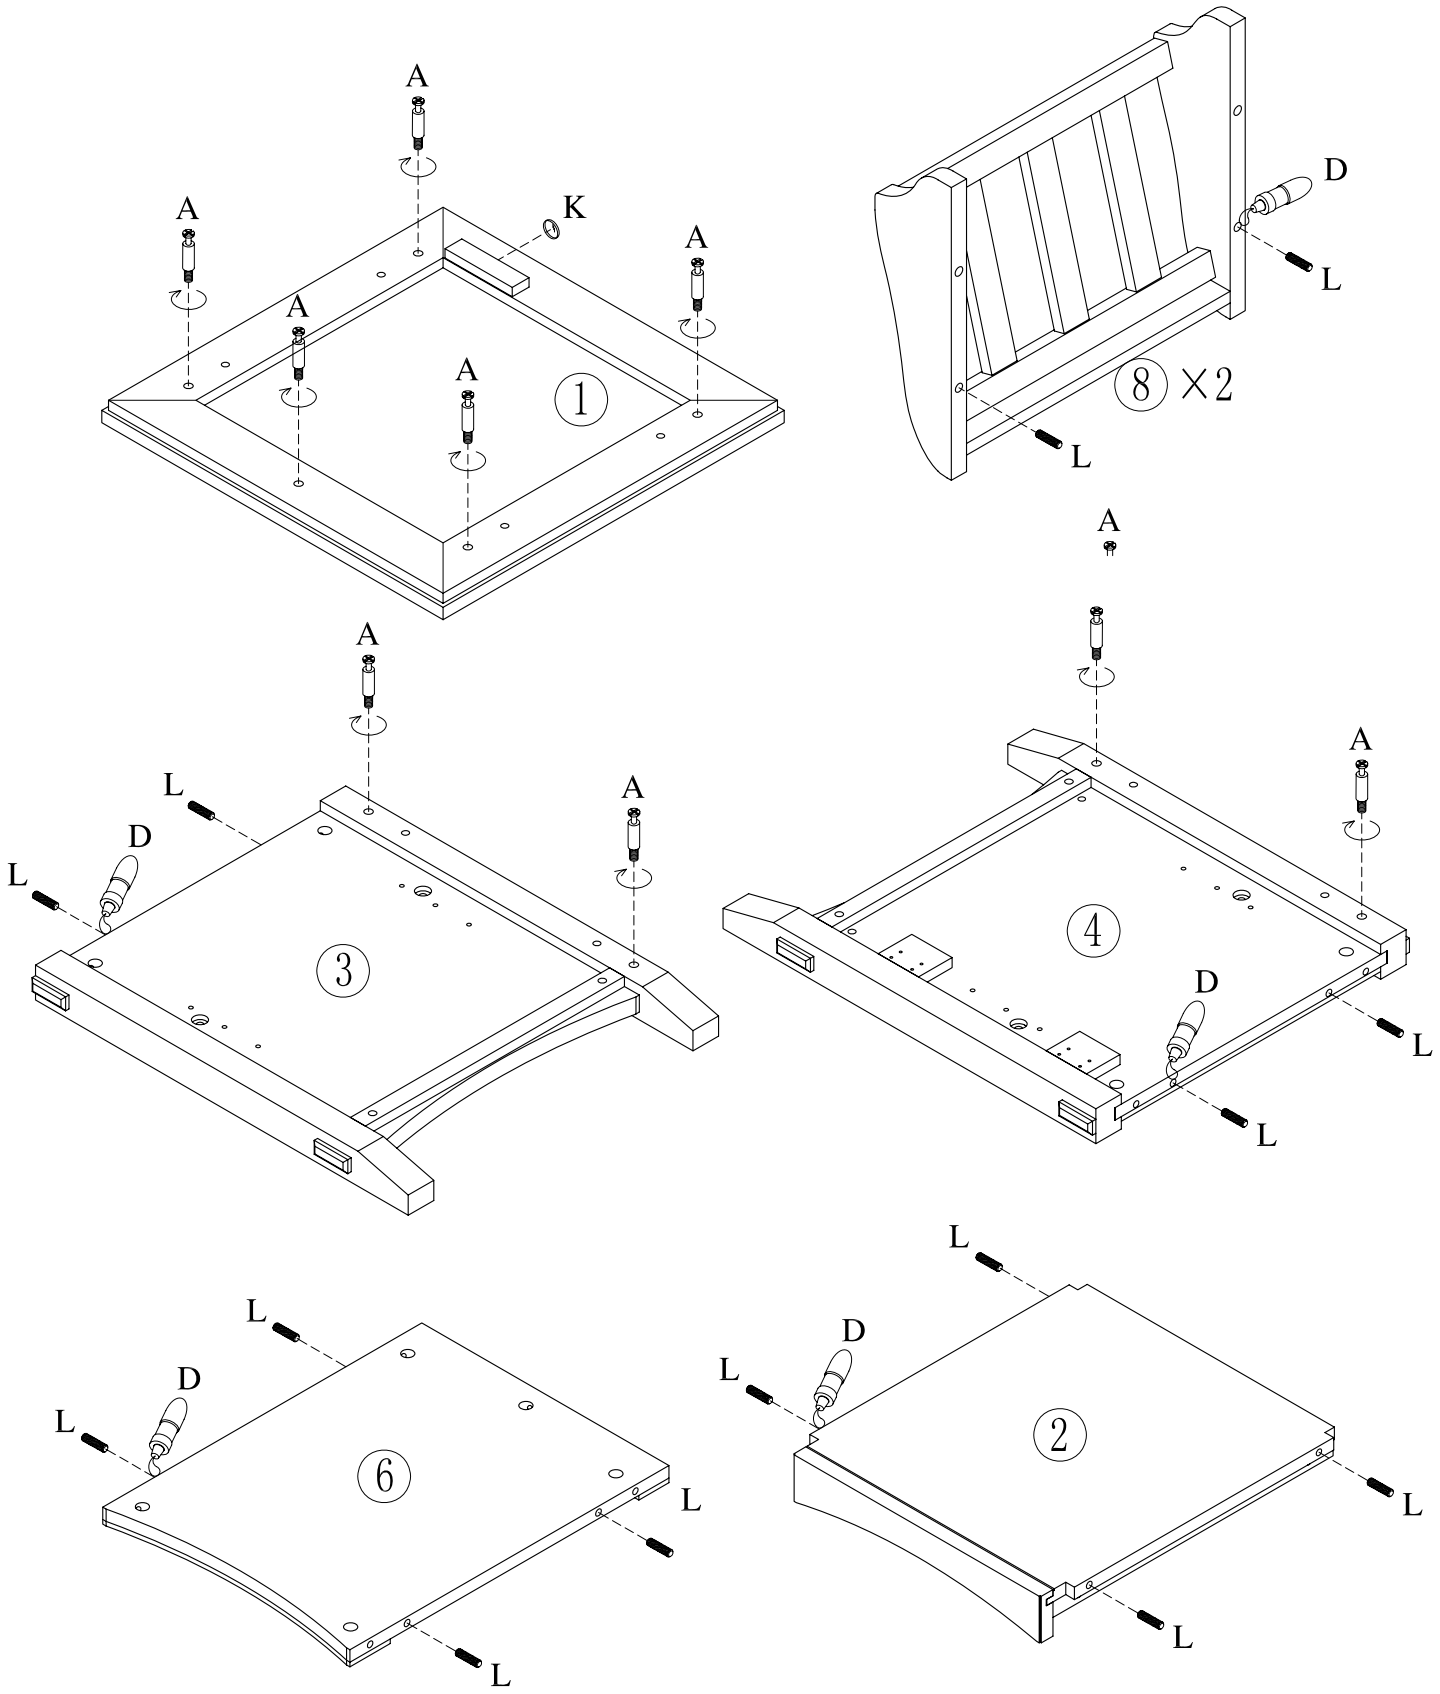

2. Attach Side Panel(3&4) to Back panel(6), Bottom Frame(2) with Allen Bolts(M) through Lock Washers(N), Flat Washers(O) and Cam-locks(B) by Allen Wrench(E) . Cover all Cam-Locks(B) with Covers(C) .
   See figure below:

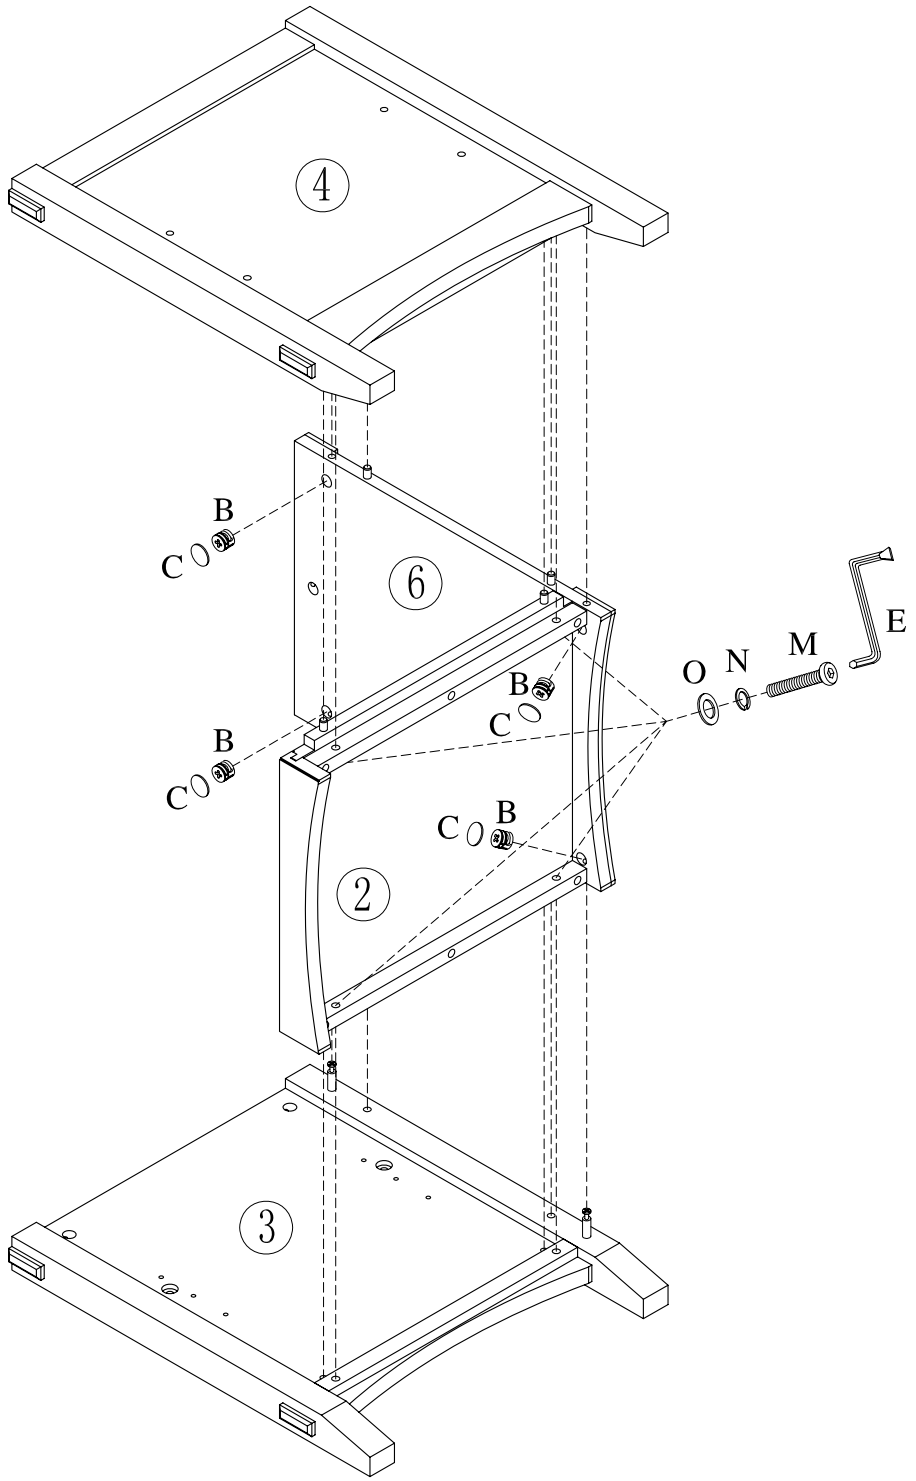

3. Attach Magazine Rack(8) to Side Panel(3&4) with Allen Bolts(M) through Lock Washers(N), Flat Washers(O) by Allen Wrench(E) .
4. Attach Top Panel(1) to the unit with Cam-locks(B) by Allen Wrench(E). Cover all Cam-Locks(B) with Covers(C) .
   See figure below:

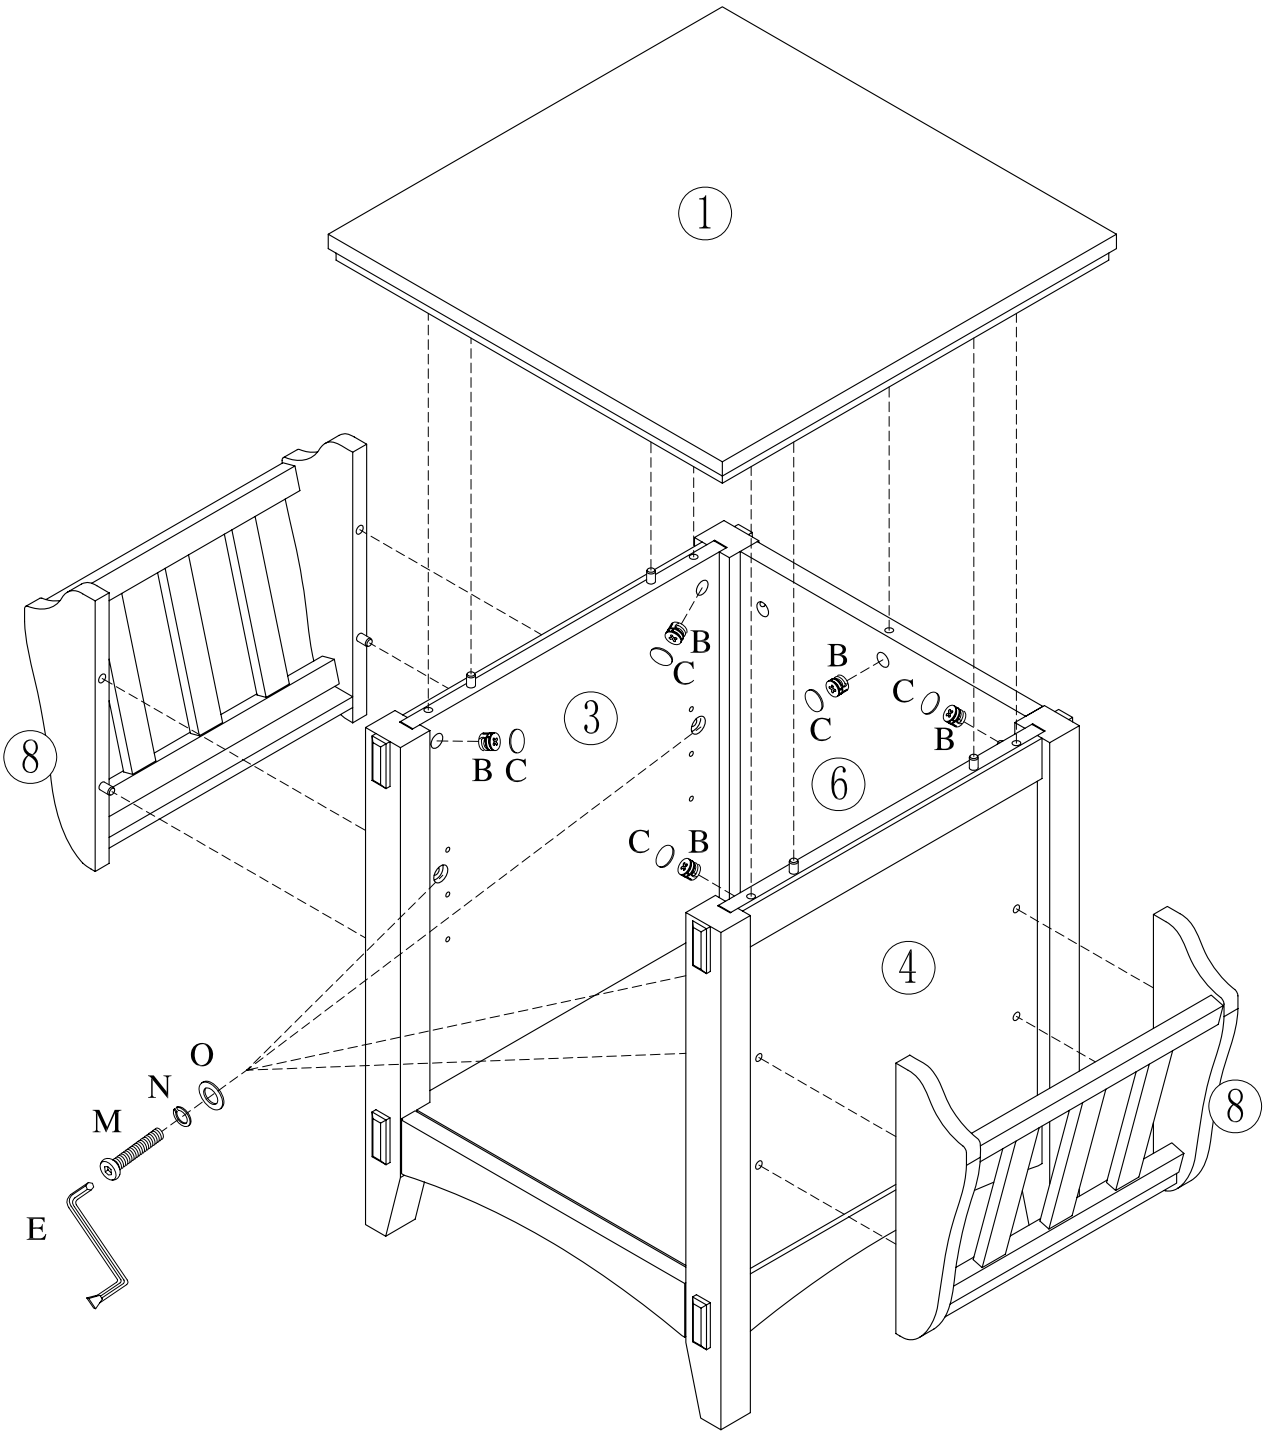

5. Attach Hinges(F) to Door(5) with Flat Head Screw(G) .
6. Attach Door(5) to the unit with Hinge(F) and Flat Head Screw(G) .
   Attach Hand Pull(H) to Door(5) with Long Bolts(I) by screwdriver .
7. Place Shelf Support(J) into the holes on side panels. Place Adjustable Shelf(7) onto the Supports(J) .
   See figure below:

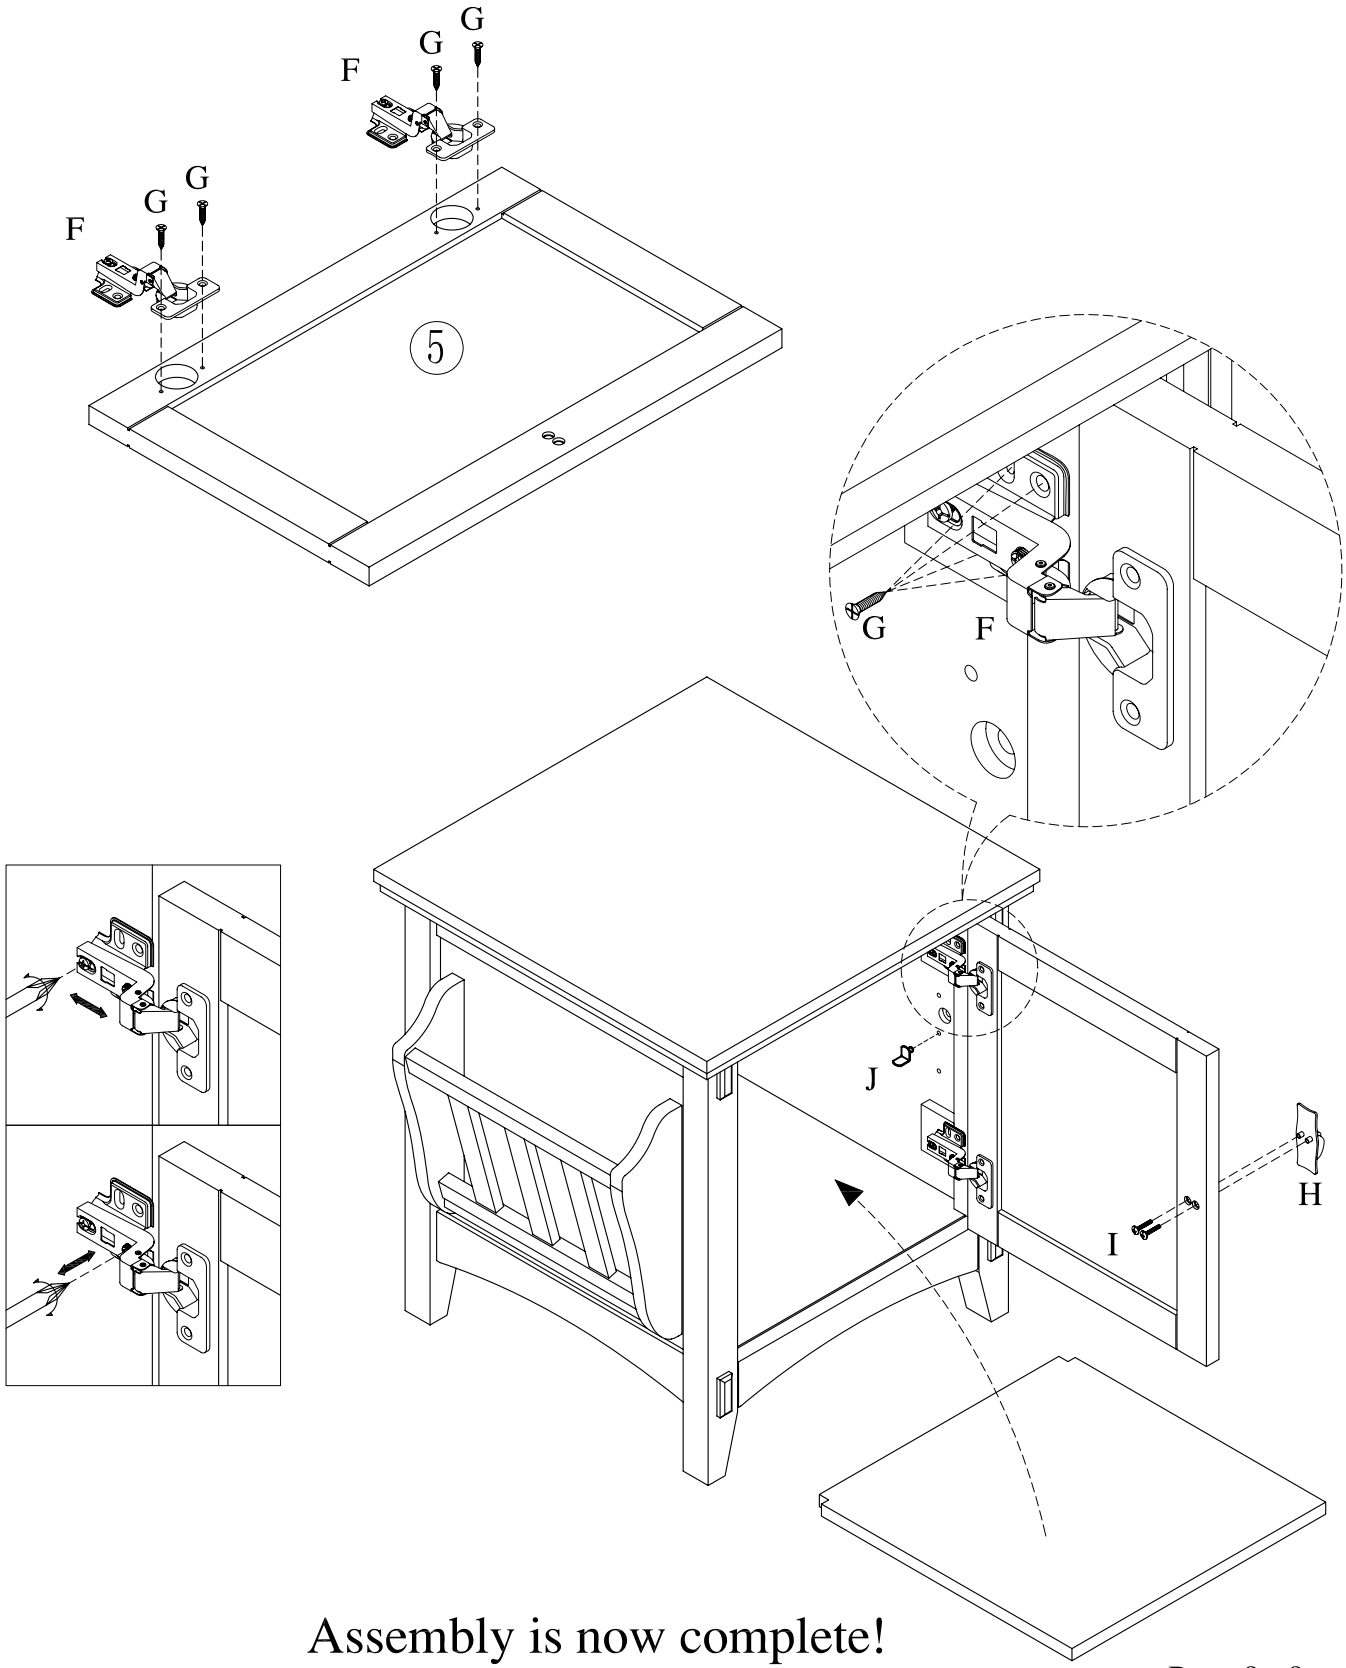

Assembly is now complete!